



Notes

1. Please place the device on the flat position, do not tilt it.
2. Do not mix water into the essential oil.
3. Please operate and maintain the device refer to the instruction. Do not dismantle or modify the device.
4. Please use alcoholic solution to wash the bottle and atomize core when the device has not been used for a long time.
5. Please wash atomize core with alcoholic solution when the device operate for 2 months.



Troubleshooting

Problem	Solution
No atomization	1. Check if the power is on. 2. Check if the time period is set during the non-working period. 3. Check if the air pump is working. 4. Check if the air intake seal is leaking or broken. 5. Check if the suction pipe is blocked or detached.
Weak atomization	1. Check for broken inlet seals and a clogged suction hose. 2. Check the atomization system and essential oil bottle seals for damage or misalignment.
Oil leakage	1. Check if the atomization system is damaged. 2. Check if the sealing rings of the atomization system and essential oil bottles are damaged or loose. 3. Check if the essential oil bottle is properly tightened.
Abnormal noise	1. Check the air pump for looseness and reattach it. 2. Check the air pump for damage and replace it if necessary.

Equipment Maintenance

For optimal aroma performance, please perform regular maintenance on your device:

1. Open the device and remove the used essential oil bottle.
2. Pour a small amount of alcohol into the bottle and clean it thoroughly.
3. After cleaning, add a small amount of alcohol, reattach the bottle to the device, power it on, and let it run for 5-10 minutes.
4. Turn off the device and disconnect power after cleaning.
5. Remove the bottle, refill it with essential oil, and securely reinstall it.

After Sales Service

This equipment is sold with a one-year warranty from the date of purchase. Paid maintenance is available beyond the warranty period. The following man-made or accidental damages are not covered under the warranty:

1. Using a power adapter not supplied with this device or an insecure power outlet, which may cause the device to short-circuit.
2. Attempting to disassemble the device; doing so will result in automatic forfeiture of the warranty.
3. Improper use contrary to the specifications — including damage caused by essential oil leakage after water injection or incorrect orientation of the essential oil bottle.
4. For any after-sales inquiries, please contact the authorized service provider in your region or reach out to our sales center.



Véra Tower

PRODUCT INSTRUCTION

 
Installation Instructions



1
Pull up the atomizer.



2
Turn counterclockwise to unscrew the oil bottle.

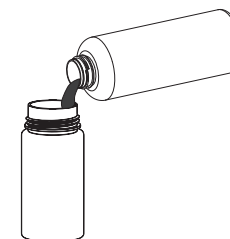

3
Add essential oils to the bottle, and put back in the unit.

Parameters

Capacity	: 150mL
Power	: 5W
Voltage	: DC12V
Weight	: 0.6KG
Noise	: <36dB
Coverage	: 400m ³
Size	: 98*98*270mm
Color	: Black, Silver
Material	: Aluminum

Accessories



Power adapter



Remote



Instructions

Intensity Description

Intensity	G1	G2	G3	G4	G5	G6	G7	G8	G9	G10	G11	G12	G13	G14	G15	G16	G17	G18	G19	G20
Working Time(s)	5	5	5	5	5	10	10	10	10	10	15	15	15	15	15	20	20	20	20	20
Stop Time(s)	660	630	600	570	540	510	480	450	420	390	360	330	300	270	240	210	180	150	120	90

App Operation And Settings

I. Download and install the APP

Please enter the Apple Store, Google App Market, Android App Market and enter **HOUSE OF DUAA** to download the control APP.



Download on the App Store




Download for Google Play

II. Connection operation

Note:

1. Before operation, please turn on the mobile phone Bluetooth.
2. After opening the APP, register an account and log in, please agree to the location and network permissions of the APP, otherwise the fragrance device may not be successfully bound


1. Click to add device

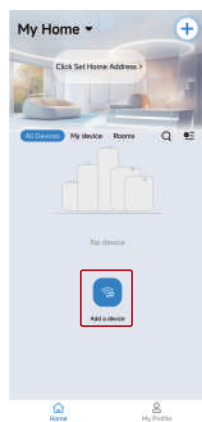

2. Select the device to connect




3. Binding successful

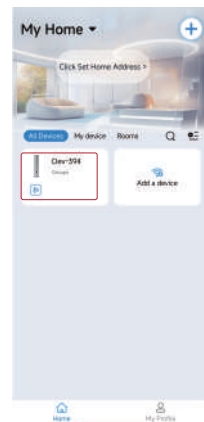


4. Press the "On" to switch the device on.




5. Tap 'Timer' to set the timer

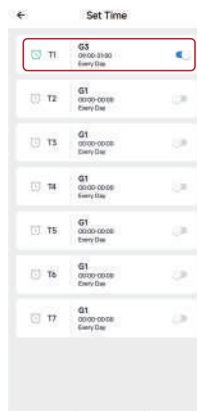

6. Set intensity, time period

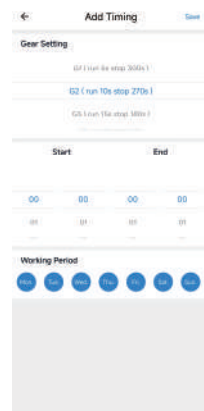

Function Description

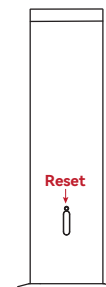

Reset Description	
Single-click	Buzzer will sound but has no function.
Double-click	Switch on/off for the diffuser fan.
Hold down for 5 seconds	Reset the diffuser's device connection and restore factory settings, the buzzer sounds for about three seconds when reset.

Anti-tip Protection

This device features an intelligent anti-tilt protection system: the water pump stops automatically if the tilt angle exceeds 45° or it is fully inverted (other functions continue operating) to ensure safety.

Tilt State: The air pump stops, and the buzzer emits a rapid "beep beep" alarm.

Recovery State: When righted to upright, pump restarts automatically; it signals with a single beep.


Notes:

The air pump's start-stop process is automatic; no manual intervention is required.

Always place the device on a stable, level surface during use to prevent accidental activation of the protective mechanism.

This function only stops the air pump operation; the device power remains on. For a complete shutdown, press the power key.

Remote Control

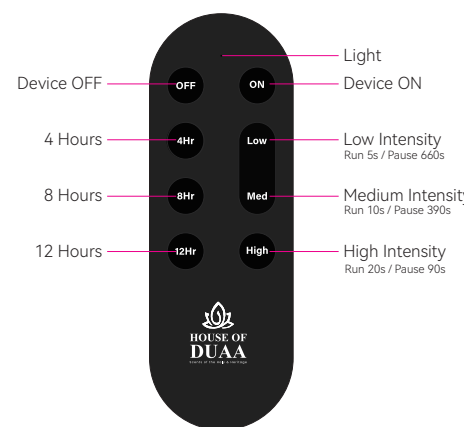

Specifications

Model: **Vera Tower**

Battery Type: 2 x AAA

Operating Range: At least 5 m (16 ft) at a 30° angle

Wireless Technology: Infrared (IR)

Battery Installation

- Turn the remote control upside down.
- Press the latch on the battery cover and slide it off.
- Insert the batteries, matching the + and - terminals as marked in the compartment.
- Slide the battery cover back into place until it clicks closed.

Safety Precautions

- Battery: Use only the specified AAA battery type. Do not mix old and new batteries, or different types of batteries.
- Disposal: Dispose of used batteries in accordance with local environmental regulations.
- Liquid: Keep the remote control away from liquids. Do not expose it to rain or moisture.
- Damage: Do not drop, impact, or disassemble the remote control.
- Cleaning: Clean with a soft, dry cloth. Do not use any harsh chemicals or abrasive cleaners.

Remote Control Pairing

1. Long press the device **"Reset"** for 5s to reset Bluetooth, restore factory settings, and enter remote pairing mode (indicator flashes red and blue alternately).
2. While the indicator is flashing, long press the remote's **"ON"** and **"OFF"** buttons simultaneously to pair.
3. Pairing successful: device beeps long, **indicator turns purple**.
4. If no pairing is performed in pairing mode, the device will automatically remember the last paired remote.